


ACTIVE BIKE PRO 2

ACTIVE BIKE PRO 3




LIT Pritvirtinimo instrukcijos
 PL Instrukcja montażu
 CZ Návod na montáž
 SK Návod na montáž
 SLO Navodila za pritrjevanje
 HR Uputa za sastavljanje
 HU A felszerelés módja
 GR Οδηγίες συναρμολόγησης
 UA Інструкція з монтажу
 BY Інструкцыя па мантажы
 RO Instrucțiuni de montare
 TK Uydurma talimat
 N Monteringsveiledning




I Istruzioni per il montaggio
 GB Fitting instructions
 F Instructions de montage
 D Montageanleitung
 E Instrucciones de montaje
 NL Montage-instructies
 DK Monteringsinstruktion
 FIN Asennusohje
 S Monteringsanvisning
 RU Инструкция по установке
 PT Instruções de Montagem
 EST Paigaldusjuhend
 LAT Stiprināšanas instrukcija










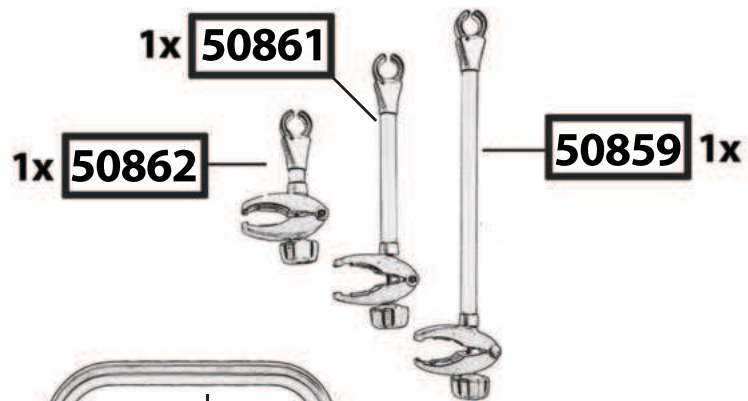


ACTIVE BIKE PRO 2

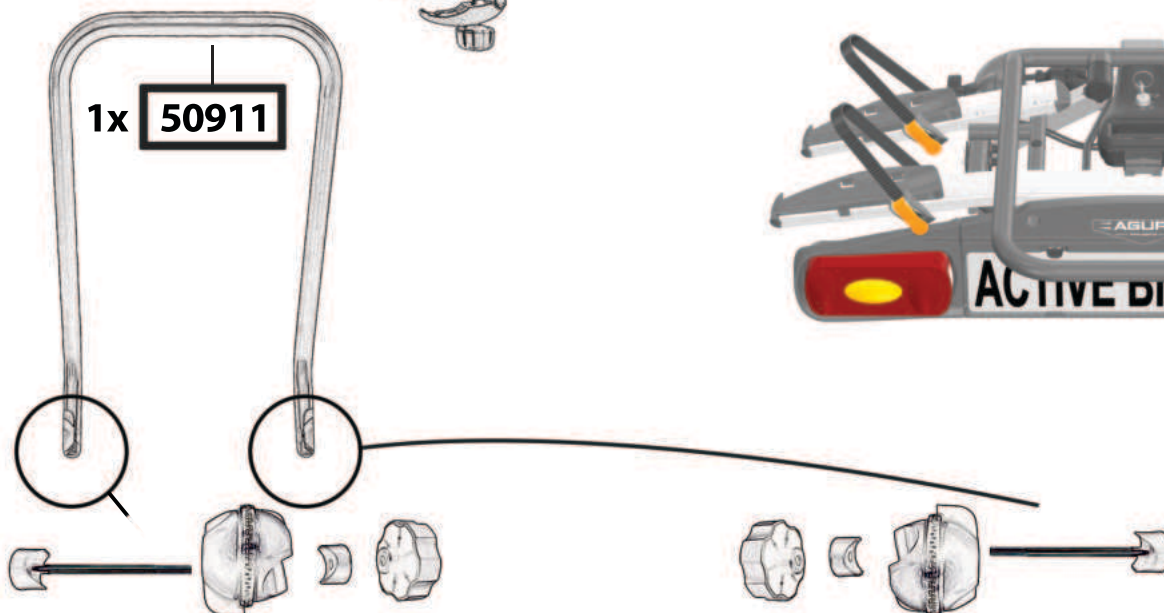


ACTIVE BIKE PRO 3

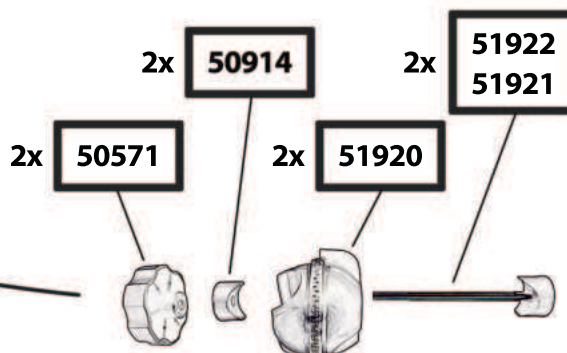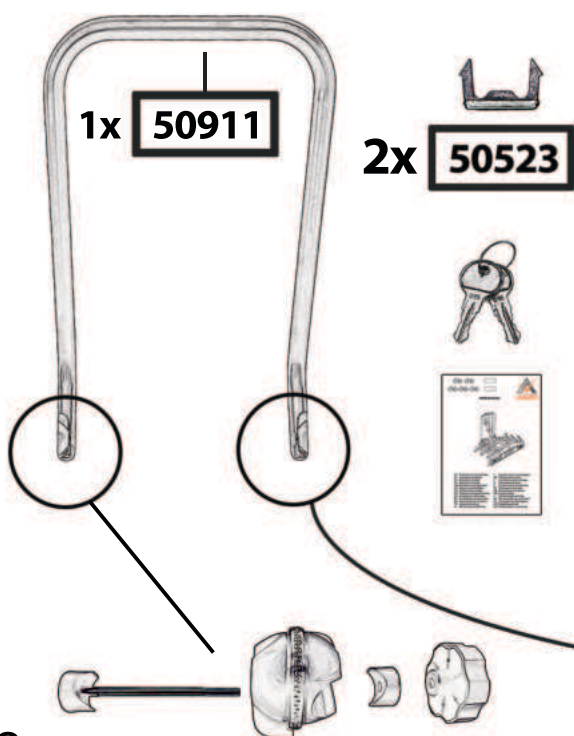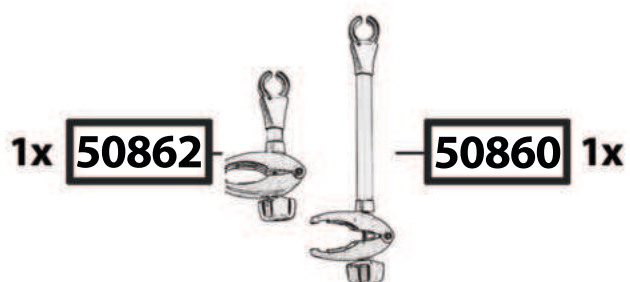

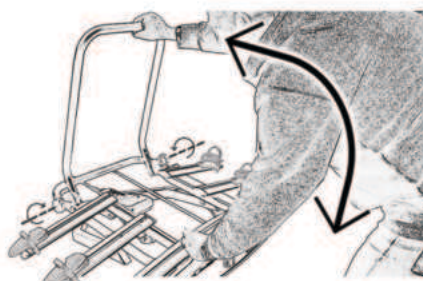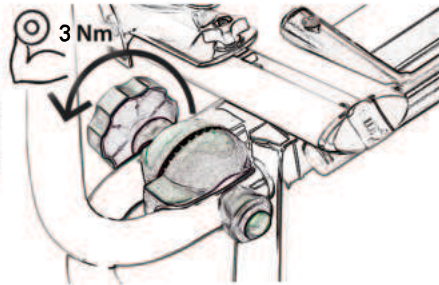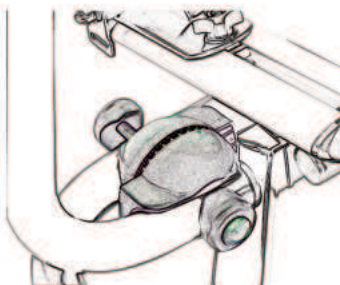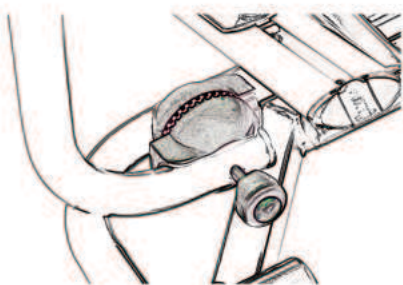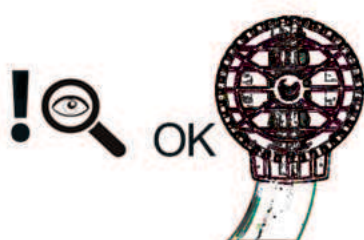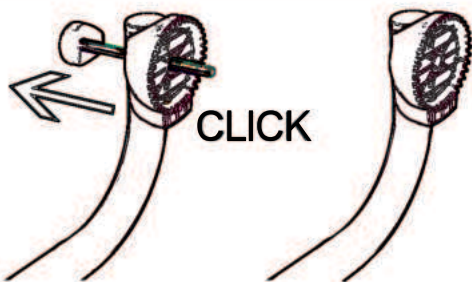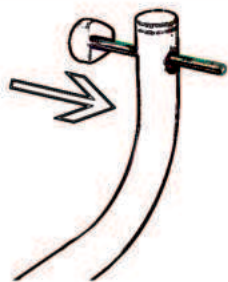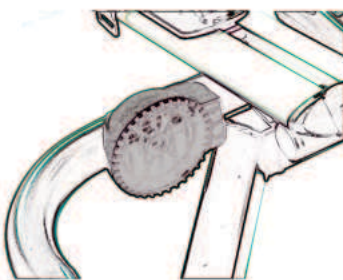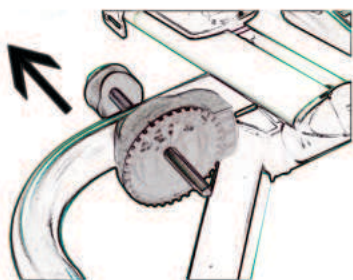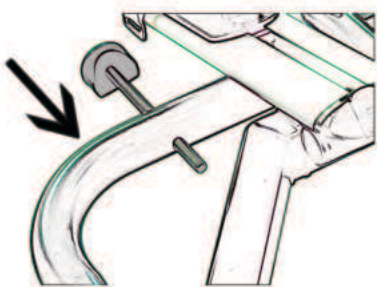


	ACTIVE BIKE PRO 2		ACTIVE BIKE PRO 3	
 KG				
	19,5 KG		21 KG	
50 KG	-19,5 KG	30,5 KG	-21 KG	29,5 KG
60 KG	-19,5 KG	40,5 KG	-21 KG	39,5 KG
70 KG	-19,5 KG	50,5 KG	-21 KG	49,5 KG
80 KG	-19,5 KG	60,5 KG	-21 KG	59,5 KG


1.

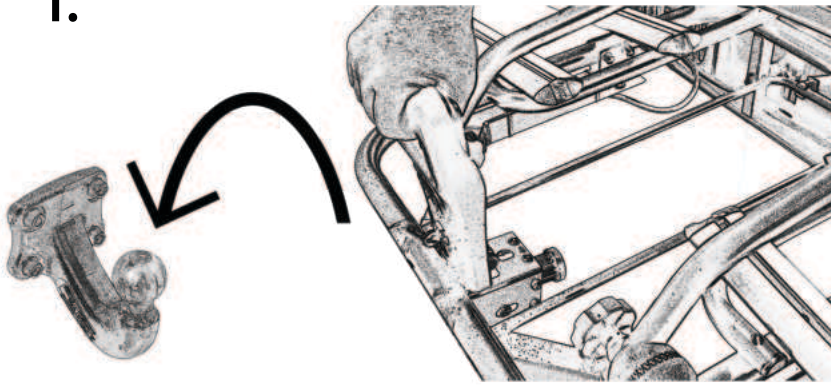


2.

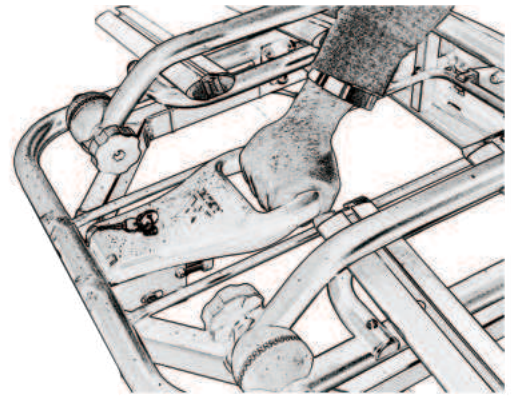


3.

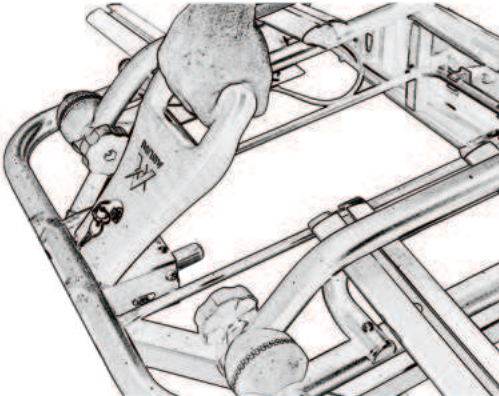


4.

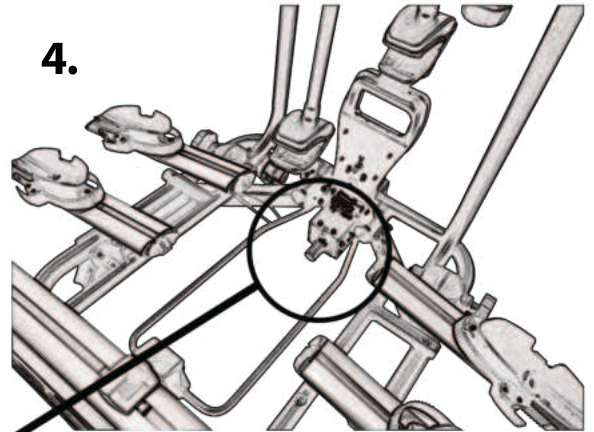


5.

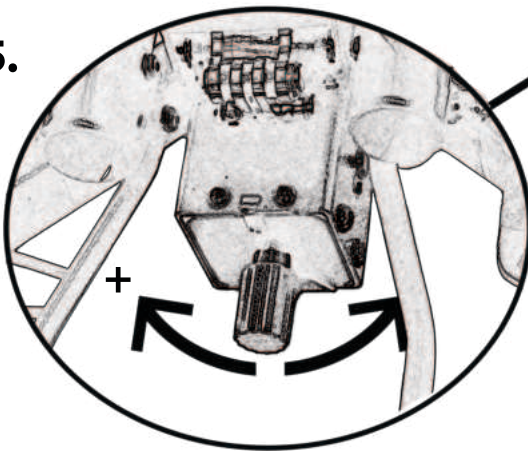


6.

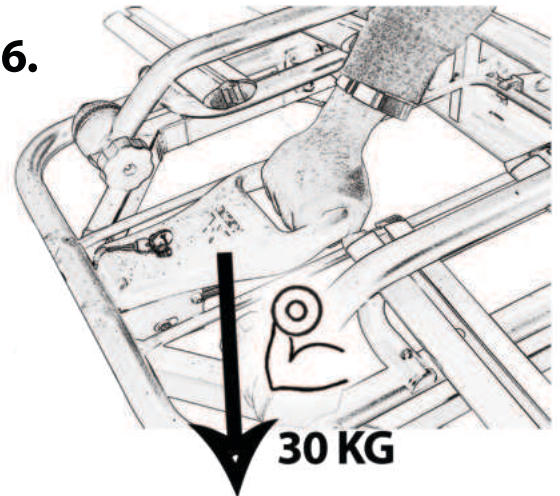


7.


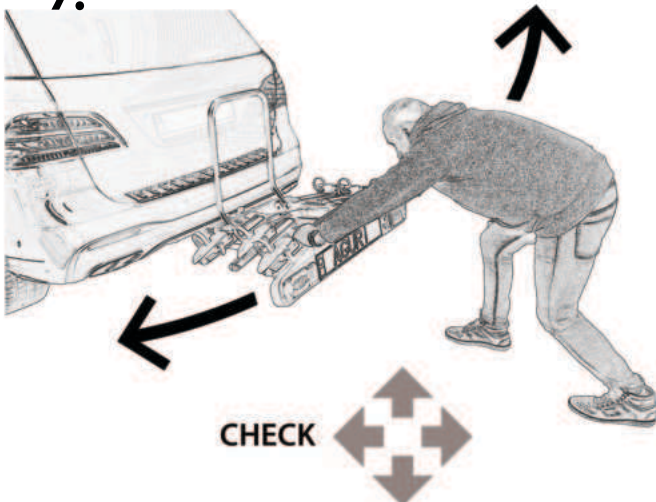


8.


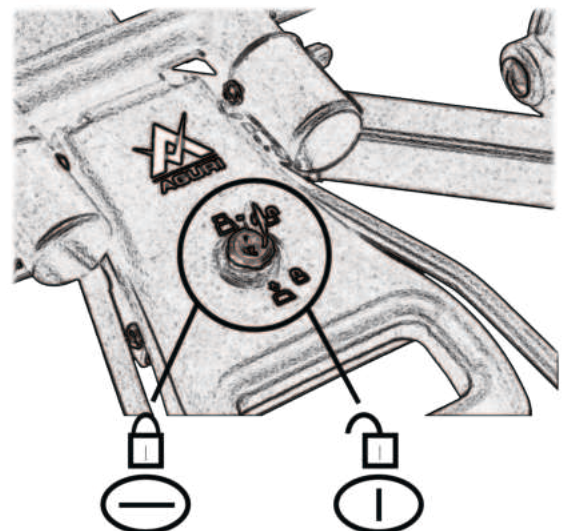








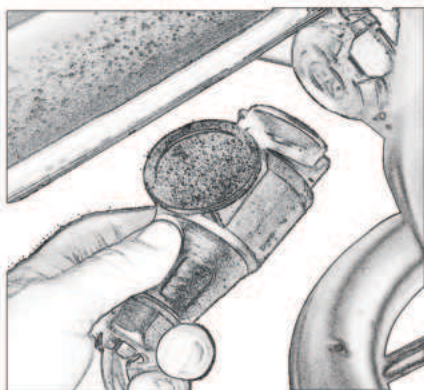










13 PIN

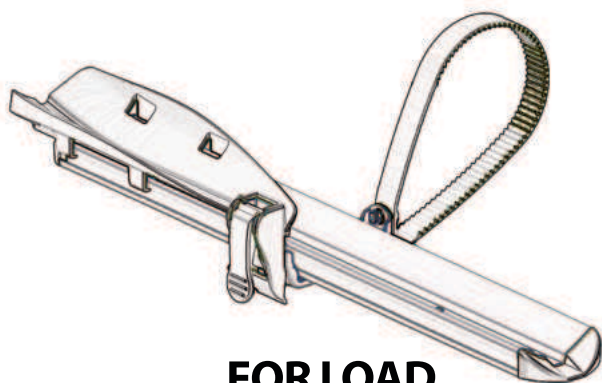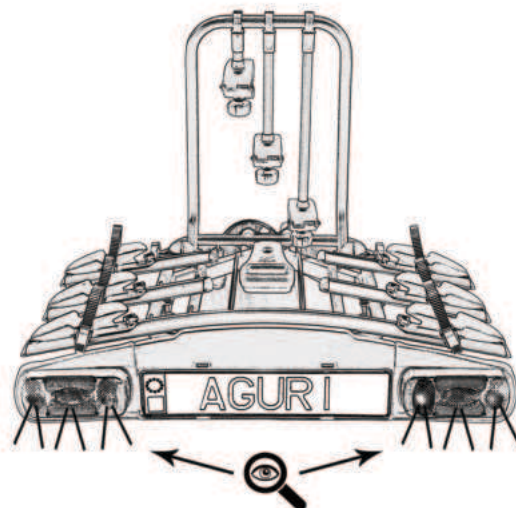


FOR LOAD

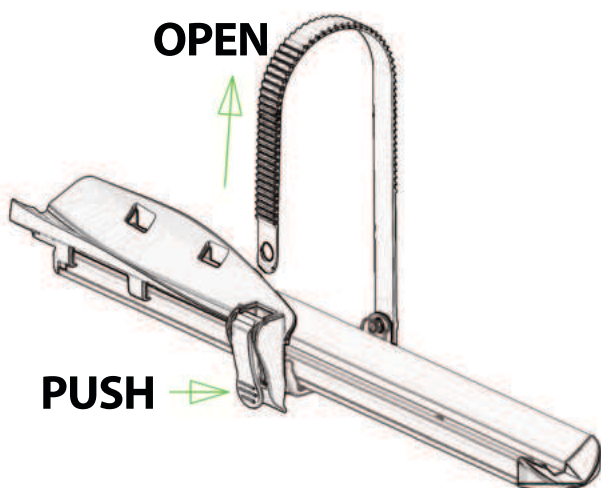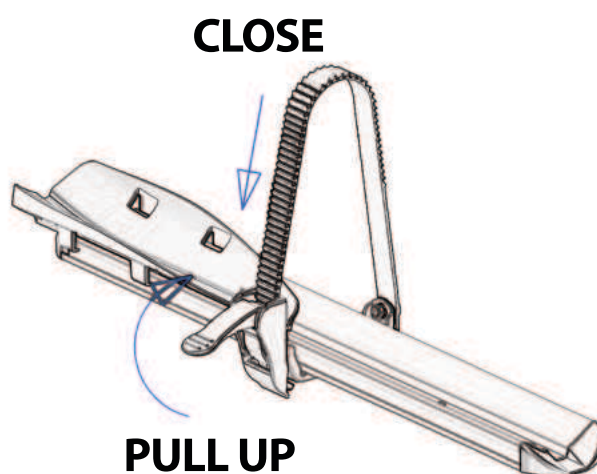


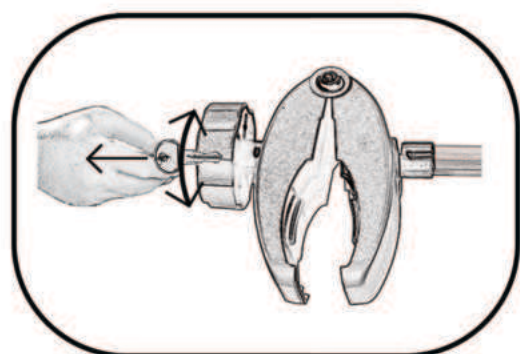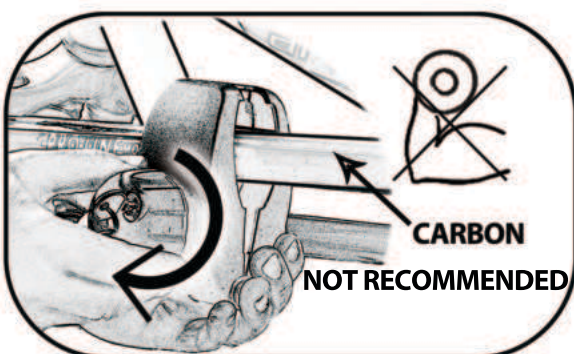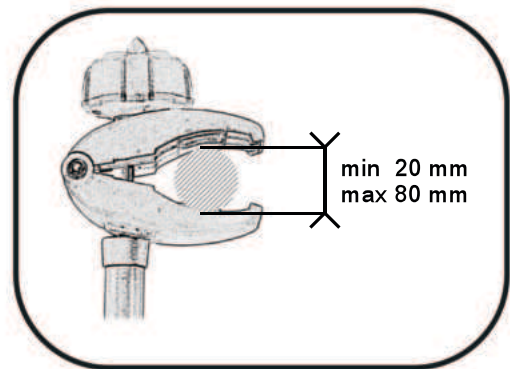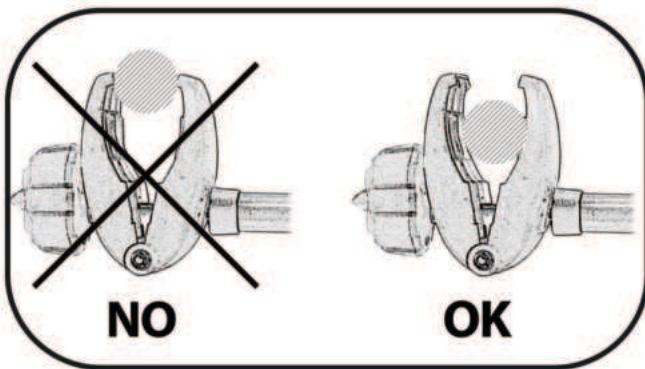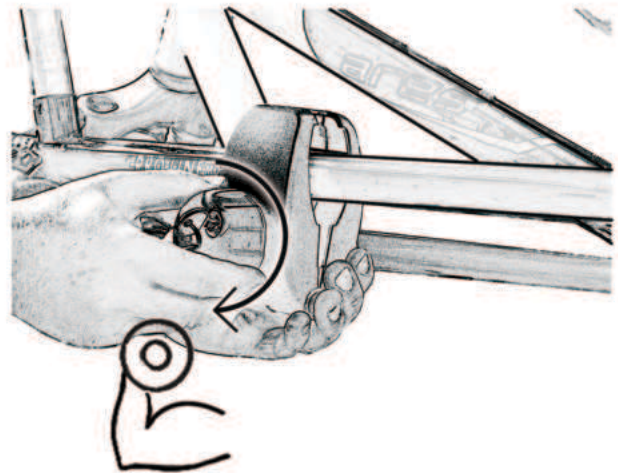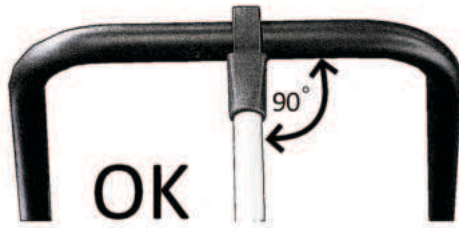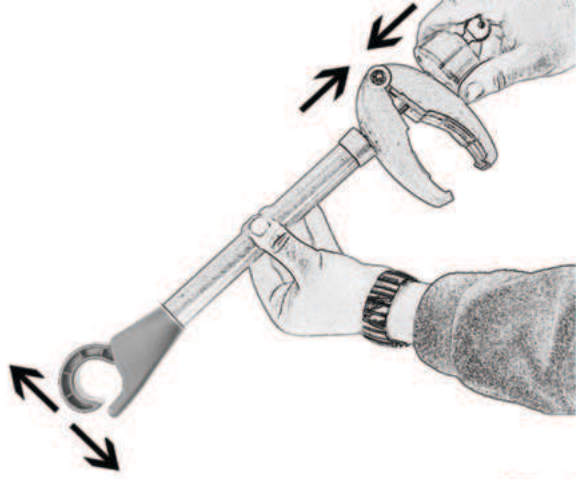

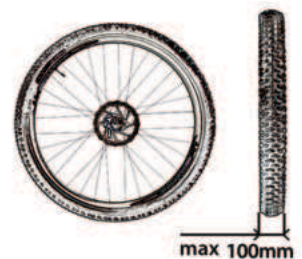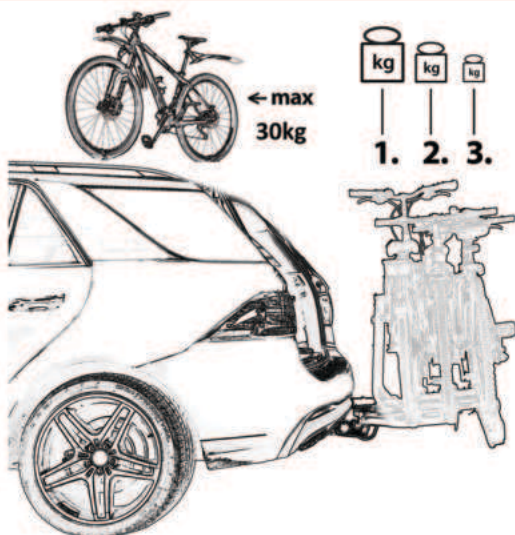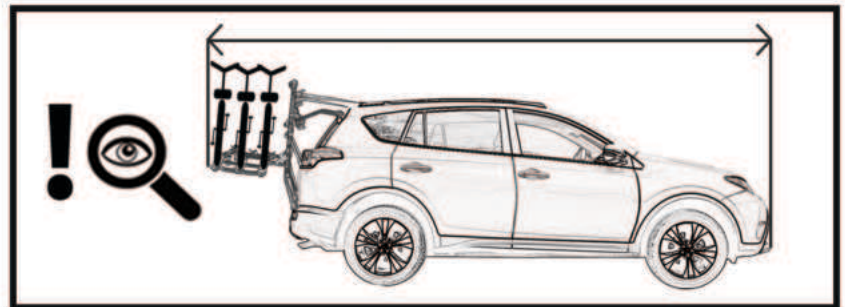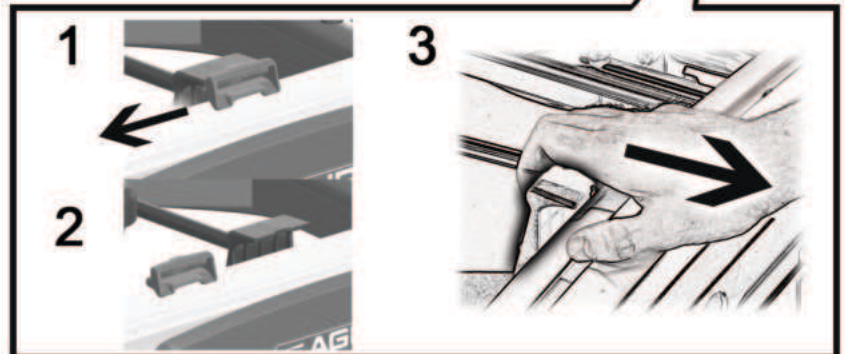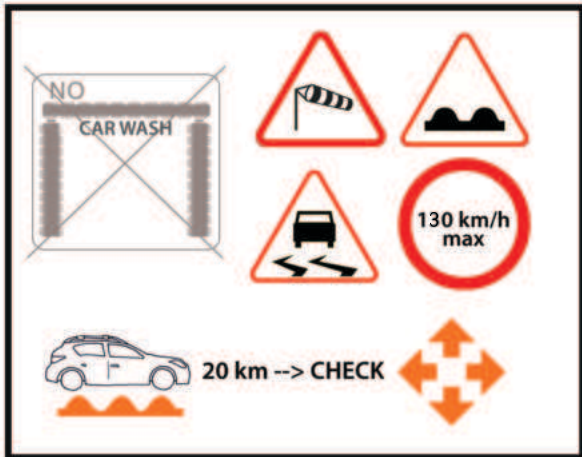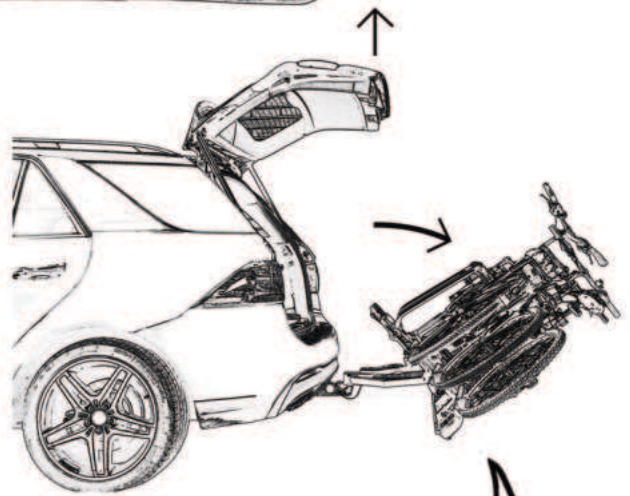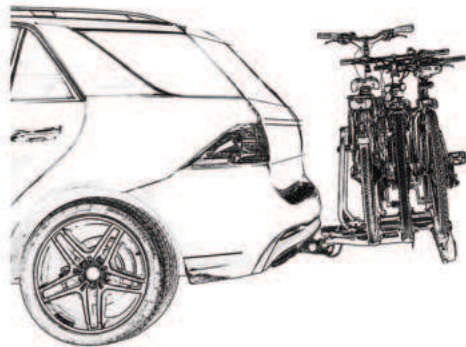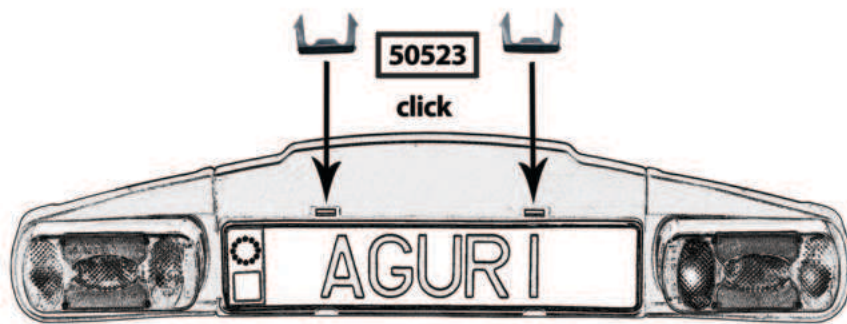

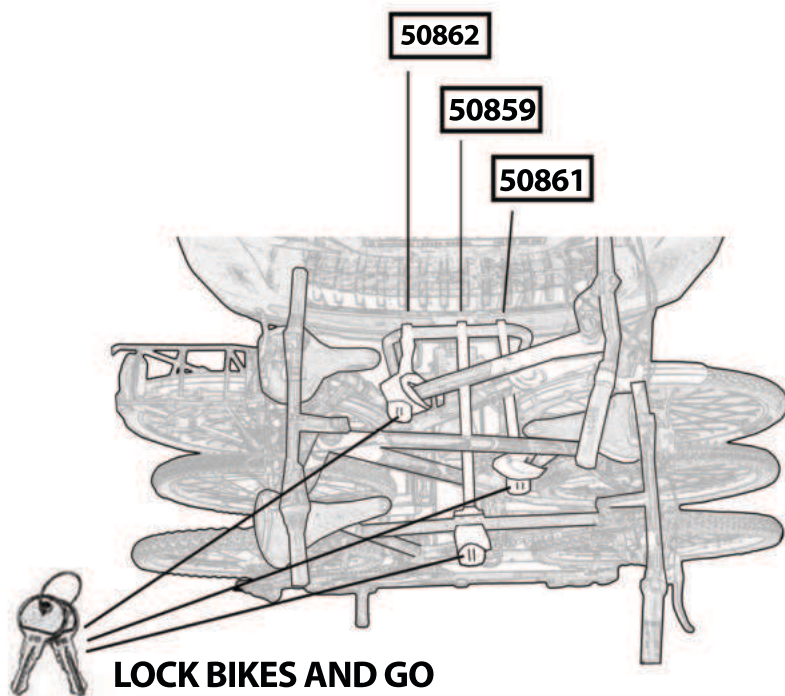


- 1.
- 2.
- 3.

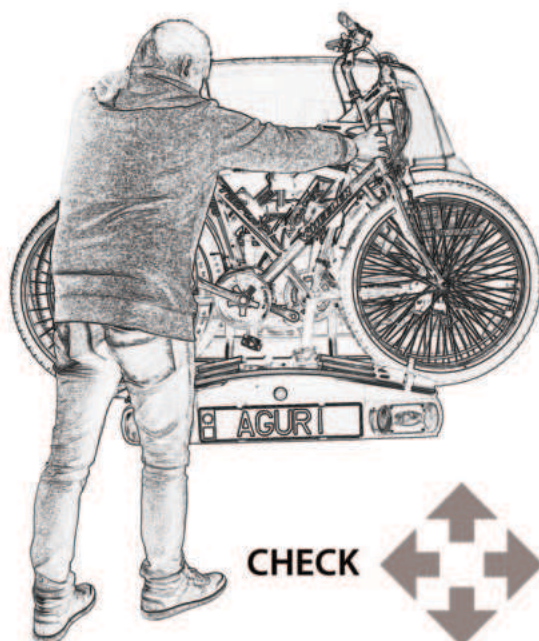


CHECK



ACCESSORIES

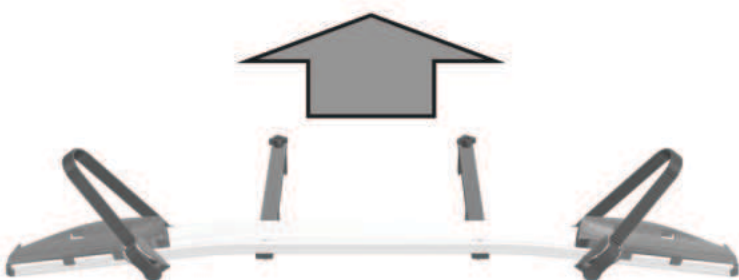

3/4th BIKE ADAPTER
53004 SILVER 53005 BLACK

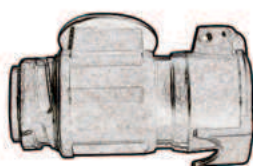


13 PIN / 7 PIN

50072



50532

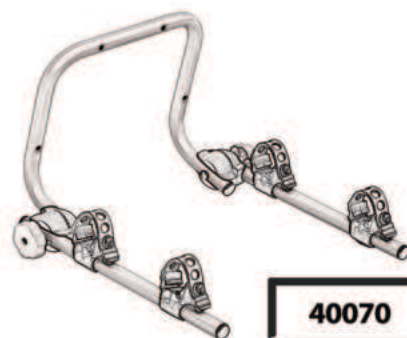

40070



50484
LOADING RAMP